



KIRK telecom A/S  
Langmarksvej 34  
DK-8700 Horsens  
Tel. +45 7560 2850  
Fax +45 7560 2851  
kirk@kirktelecom.com  
www.kirktelecom.com

## KIRK 4080 Handset



## User's Guide

## Congratulations on your new KIRK handset

Your new handset from KIRK telecom will provide you with the greatest possible degree of flexibility and mobility due to high battery capacity, low weight, practical size and design.

### Contents:

1. Warning .....	4	9.5 Menu subscription and login .....	22
2. Label information .....	5	9.5.1 Create subscription .....	23
3. Construction .....	6	9.5.2 Login .....	24
4. Battery installation .....	7	9.5.3 Auto login .....	25
5. Charging .....	8	9.5.4 Remove subscription .....	28
6. Key functions .....	9	9.5.5 Change startup text .....	28
7. Turning the handset ON/OFF .....	11	9.6 Battery .....	29
8. Making a call .....	12	9.7 Redial .....	30
8.1 Receiving calls .....	14	9.8 Book .....	32
8.2 During conversation .....	15	9.9 External services .....	34
8.2.1 Volume regulation .....	15	9.10 MSF Functions .....	35
8.2.2 Microphone mute .....	15	9.11 Mail/Textmessages .....	36
8.2.3 Transferring the call to another handset .....	15	9.12 Menu language .....	40
9. Menu structure .....	16	10. Shortcuts .....	41
9.1 Using the alphanumeric keyboard .....	17	11. Speed dial .....	42
9.2 The key functions .....	18	12. Date and Time Funktion .....	43
9.3 Handset set-up .....	19	13. Advanced settings .....	44
9.4 Handset functions .....	21	14. Information .....	48
		14.1 Error tree .....	48
		14.2 Error information .....	49
		14.3 Warranty .....	49
		14.4 Technical information .....	50
		15. EC Declaration of Conformity .....	52

## 1. Warnings

The KIRK 4080 is developed for use in potentially explosive working environments, as defined by local fire protection authorities. The handset complies with the ATEX directive 94/9/EC as well as IEC standards, please refer to Declaration of Conformity at the end of this user guide for more details.

For safe use of KIRK 4080, please remind the following:

- Please consult your system manager for instruction before using KIRK 4080
- Do not open KIRK 4080 in a potentially explosive atmosphere
- Use only the dedicated charger **8464 2458** (orange) for charging KIRK 4080
- Do not charge KIRK 4080 in a potentially explosive atmosphere
- The AC power adaptor used in connection with the charger must **not** be connected to a higher voltage than 250V AC.
- Use only battery pack **8474 3416** for battery replacement.
- Use only headset part no. **0231 9517** with KIRK 4080
- The leather pouch **0231 9543 must** be used with KIRK 4080:
  1. In dry areas with humidity conditions of less than 60%
  2. When the user is wearing clothes that could cause electrostatic charging of the handset

- If defects occur, remove KIRK 4080 immediately from the potentially explosive atmosphere
- Only KIRK telecom A/S may repair and service KIRK 4080
- Relevant data concerning repairs must be logged
- For traceability it is advisable to keep a record of type- and serial numbers of the handsets, as well as the name of users of the handset


## 2. Label information

SN: 00077 0612630 4  
00W36

HW PCS: 4  
SW PIE: 1

Serial number  
Production date (year 2000, week 36)  
Hardware version  
Software version

### 3. Construction

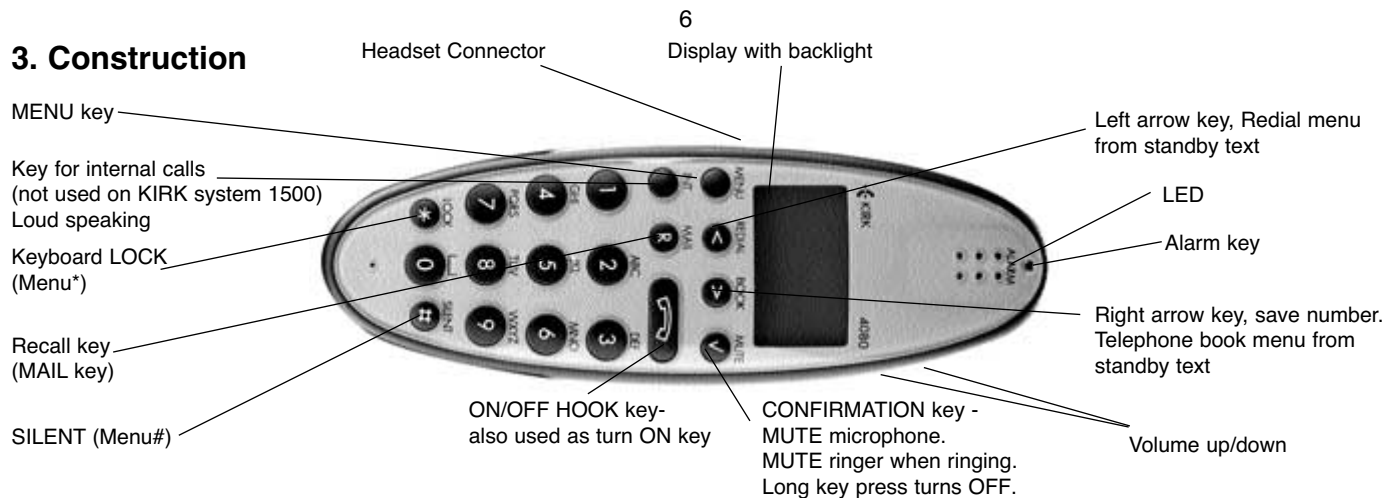

### 4. Battery installation

The battery is connected to the handset as factory default and must **not** be removed in a potentially explosive atmosphere.



To change the battery you must unscrew the plate on the back of the handset by means of a special tool to access the battery compartment. To remove the battery cover, use a “normal” screwdriver. Insert it into the small crack behind the blind cover and break to open the handset.

**Please note:** The product label, including the CE logo, can be found in the battery compartment.

## 5. Charging

**Do not charge KIRK 4080 in a potentially explosive atmosphere. Use only the dedicated charger 8464 2458 (orange) for charging KIRK 4080.**

It takes approximately 3 1/2 hours to charge the handset from fully discharged to its full capacity. Place the handset in the charger. When the handset is turned on, the display shows the charging status in line 3. For correct charging the room temperature has to be between 0°C and 25°C and the handset must therefore not be placed in direct sunshine. The battery has a built-in heat sensor which will stop charging if the battery temperature is too high.

It is necessary to recharge the battery when the display shows "BATTERY LOW", or if it can not be turned on. The LED flashes at a low frequency while charging and lights constantly when the charging is finished. The display goes back to normal mode when fully charged.




When the handset is placed in the charger it will not vibrate, and B-answer is inactive. If the battery is fully discharged, up to 10 min. may pass before charging begins and the handset can be turned on. When charging begins the charging status is shown in the 3rd line of the display and the LED flashes slowly.

## 6. Key Functions

The handset has 21 keys:


Two keys are placed at the right side for volume control. Press upper or lower key to change the volume. Each key-press turns volume one step up/down.

- "MENU" - Go to menu structure or exits the menu structure. (Escape or »NO«)
- "<", "REDIAL" - Menu: left, Cursor left, after a digit: delete last digit. Long press: delete all  
From standby text: Redial menu
- ">", "BOOK" - Menu: right, Cursor right, After a digit: Store number in telephone book  
From standby text: Telephone book read
- "✓", "MUTE" - Confirmation (»YES«) or jump to next level in the menu. In off hook: Mute microphone  
In on hook: Mute ringer. Long key press turns the handset OFF

- “INT” - If residential systems: Internal calls off hook  
(not used on KIRK systems 1500 and 500)  
Turns loudspeaking on and off
- “R” - If off hook: Recall. If on hook: Read or write message
- “” - On hook/off hook and turn ON
- ” \* ” - \* (Change from pulse to DTMF on KIRK CCFP), Long = pause (-), extra long: change from pulse to DTMF (a ”T” appears in the display, GAP standard)
- “0-9” - Digits or letters in alphanumeric mode (names and messages)
- “ \* “ - \*, Choose uppercase or lowercase letters in alphanumeric mode

## 7. Turning the handset ON/OFF




ON: Press -key for 1/2 second.

When the handset is turned on the  symbol is shown in the lower left corner of the display, if the handset is subscribed to a system. (For subscription, see 9.5.1)



OFF: Press the “✓” (MUTE) key for 3 seconds

Please note: When the handset has been outside the coverage area, it can take up to 30 seconds before the handset is back on the system after re-entering the coverage area.



## 8. Making a call

For making or receiving calls the handset has to be subscribed to a system (  shown in display) (see chap. 9.5.1)  
 Press the -key, the -icon in the display will flash until connection is established  
 Dial the number

### Pre-dial:



Press the number to dial (long press on »\*« will make a pause, if necessary)  
 Press the -key, the -icon will flash until the connection is established

### Telephone book:

Press the > -key (book-key) to enter the telephone book  
 Search for the number either by using the < -key or the > -key or by pressing the first letter in the name by using the digits 1 – 9 (see chap. 9.2)  
 Press the -key, the -icon will flash until the connection is established



### Redial:

Redial / CLIP (CLIP = Calling Line Identification Presentation) stack:


Press the < -key (redial-key) to enter the redial/CLIP stack  
 Search for the number by using the < -key or the > -key, redial numbers are marked with REDIAL or name and clip numbers are marked either with CLIP or the name of the person who called and the LED is on  
 Press the -key, the -icon will flash until the connection is established

Using the handset in residential systems: (not in KIRK systems 1500 and 500)

Internal call post-dial:

Press the INT-key, the -icon in the display will flash  
 Dial the number of another handset on the base station, the -icon will flash until the connection is established

Internal call pre-dial: (not in KIRK systems 1500 and 500)


Press the number of another handset on the base station  
 Press the INT-key, the -icon will flash until the connection is established

**Please note:** If the Date and Time function is supported, then date and time of the incoming or outgoing call is shown in the CLIP/Redial stack on the 4th line of the display. See Chap. 12 for more information.

### **Speed dial:**

See Chap. 10 and Chap. 11 for more information about speed dialing.

## **8.1. Receiving calls**

If the phone rings, the call can be answered by pressing the -key.

When ringing the LED flashes fast, and the display shows the CLIP (if presented). If it is an external call (or if no CLIP) the display shows "INCOMING CALL".

It is possible to stop the ring signal without answering the call. Press MUTE (✓) and the ring signal is muted. Display shows: »RINGER MUTED«.

## **8.2 During conversation**

### **8.2.1 Volume regulation:**

Use the two keys placed at the right side of the handset for volume control


### **8.2.2 Microphone mute:**

Press the ✓-key (mute-key), MIC. MUTED is showed in the display

Press the ✓-key (mute-key) to enable the microphone again

### **8.2.3 Transferring the call to another handset:**


Press R, and dial new number

Press the -key and the call is transferred to the other handset

## 9. Menu structure

Pressing the MENU-key, enters or exits the menu structure. It has to be used if a “NO” or “CLEAR” is wanted in the menu structure.

Pressing the ✓-key, jumps to a lower level in the menu. When the lowest menu level is reached, it will store the setting and jump to a higher level. It has to be used if a “YES” is wanted.

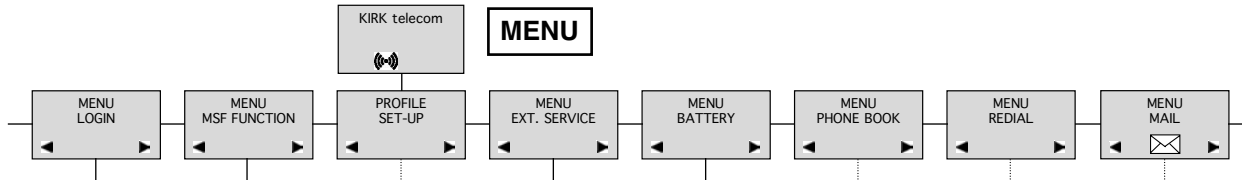

The phonebook and redial menu can be accessed directly. The phone book by pressing the > -key (book-key) and the redial menu by pressing the < -key (redial-key).

### 9.1 Using the alphanumeric keyboard

The normal dialling keys (0-9) are used for writing the name to be placed in the telephone book. By pressing the keys a certain number of times the related letters or digits will appear in the display. Spaces are made by using the 0-key. Key ★ changes between uppercase and lowercase letters. The arrows will move the cursor. Left arrow is also used for deleting (hold for 1 sec.) = delete. New letters can be inserted.

Change of key press and pauses lasting more than 1 second automatically moves the cursor to next position.

**Please note:** 4th line of the display shows the possible alphanumeric keys.


## 9.2 The key functions

Key	Capital letter	Small letter
1	? ! 1 - + * / = & ( ) % ¿ ¡	? ! 1 - + * / = & ( ) % ¿ ¡
2	A B C 2 Ä Å Á Â Ã Ä Æ Ç	a b c 2 ä å á â ã ä æ ç
3	D E F 3 É Ê Ë Ì	d e f 3 è é ê ë
4	G H I 4 Î Ï Ñ	g h i 4 ï î ï
5	J K L 5	j k l 5
6	M N O 6 Ñ Ö Ø Ó Ô Õ Ö Ø	m n o 6 ñ ö ø ó ô õ ø
7	P Q R S 7 ß	p q r s 7 ß
8	T U V 8 Ú Û Ü Û	t u v 8 ü û ü û
9	W X Y Z 9	w x y z 9
0	[Space] , . 0 : ; _ “ ‘ ^ ~	[Space] , . 0 : ; _ “ ‘ ^ ~
★	A→a	A→a
#	# @ E \$ £ ¥ § < > {   } [ \ ]	# @ E \$ £ ¥ § < > {   } [ \ ]

## 9.3 Handset set-up

To set-up the handset press “MENU”. You are now able to switch between the different settings. Press “✓” when you find the setting you wish to change (or see). Change the setting according to your needs, confirm with “✓” and you automatically go to the next setting. Press “Menu” to finalize the setup.

## Profile set-up (fig)

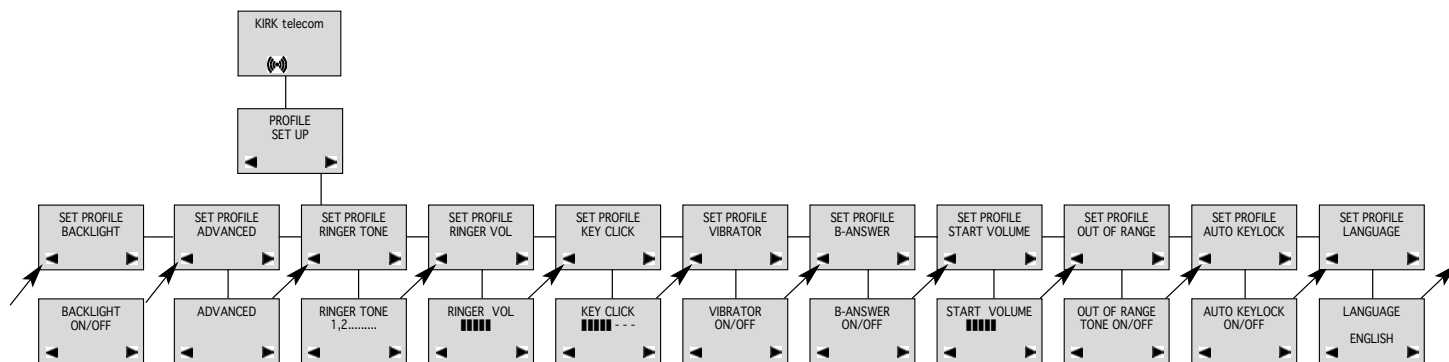

### 9.4 Handset functions

**RINGERTONE:** Scroll through the 9 different ringtones using < and >. Confirm with ✓.

**RINGER VOL:** Turn the volume up and down using < and >. Confirm with ✓.

**KEY CLICK:** Turn the volume up and down using < and >. Confirm with ✓.

**VIBRATOR:** Can be turned on/off using < and >. Confirm with ✓ (vibrator only works on KIRK 4040).

**B-ANSWER:** Can be turned on/off using < and >. Confirm with ✓. When turned on, the telephone automatically goes off hook when ringing. If subscribed to a KIRK solution it automatically goes on hook when calls are terminated. B-answer is inactive when handset is placed in the charger.

**REMARK:** Automatic on-hook is only reliable under defined conditions related to the interface settings between the KIRK Wireless Server and the PBX.

**START VOL:** Start volume can be adjusted using < and >. Confirm with ✓.

**OUT OF RANGE:** The out of range indication can be turned on/off using < and >. Confirm with ✓. With the out of range indicator turned on, a beep will appear when the telephone is moving out of range of the base station, and "OUT OF RANGE" will appear in the display.


**AUTO KEYLOCK:** The auto keylock function can be turned on/off using < and >. Confirm with ✓. With auto keylock turned on the handset will automatically lock the keys after 30 seconds. Press MENU ★ to activate the keys again.

**LANGUAGE:** see page 40

**BACKLIGHT:** Can be turned on/off using < and >. Confirm with ✓.

**ADVANCED:** see Chap. 13.

## 9.5 Menu subscription and login

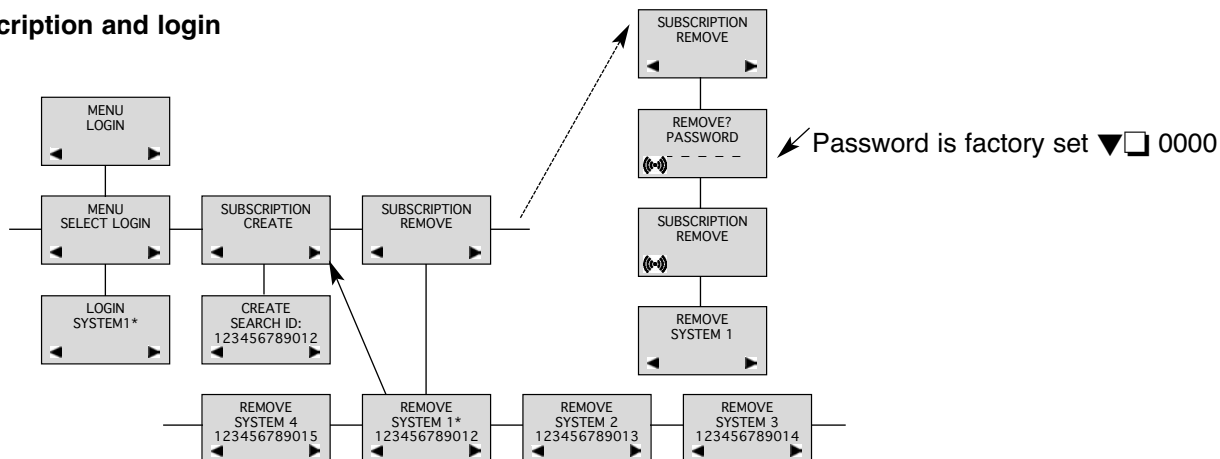

### 9.5.1 Create subscription

To make subscriptions, the system must allow subscriptions to be made. Some systems also require an Access Code (AC). If more than one system currently permits subscription, you will need to know the ID of the system to which you wish to subscribe. Access Codes and system ID's will be provided by the system administrator.

Choose the **SUBSCRIPTION CREATE** menu to subscribe to a new system. (see 9.5.3/9.5.4)

Use the < and > keys to scroll between the ID's of the different systems available

During subscription the handset will search for free positions and perform subscription on the first free position

An alternative position can be chosen using < or >. Give in the AC (if required) using the keyboard, and press (✓)

If the subscription was successful, the startup text will be replaced by the standby text given into the system by the system administrator and (📶) is shown in the display. If not, the subscription has failed and the procedure must be retried.

If the handset is already subscribed to 10 systems, you will have to remove a subscription before creating a new subscription (see 9.5.4).

### 9.5.2 Login

The handset can be subscribed to 10 different systems enabling you to use the same handset on 10 different systems.

If you would like to change to another system, use the login menu to connect to another system number.

The actual chosen system is marked with a ★ or an A (if Autologin is selected).


To change to another system use < or > and press ✓ to confirm

To be able to log on to a system, subscription to the system has to be established (See 9.5.1).

Under LOGIN/SELECT LOGIN only subscriptions will be shown. Free positions will not be shown.

### 9.5.3 Auto login

The handset can be subscribed to 10 different systems. If Auto login is chosen from the menu, the handset automatically selects a system. The selected system is marked with an “A”.

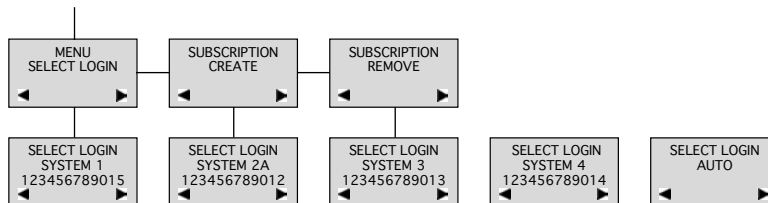

**Please note:** Auto login A should only be used in separate systems without overlaps. If a handset loses signal from the system (the display showing "OUT OF RANGE"), then after 20 seconds the handset will start searching for an alternative system available from the Login list and automatically change to this system. Changing between systems can only take place while on hook. Any call will be dropped when changing to an alternative system.

If a handset is subscribed to two systems only, you can use Auto login B to change between the two systems automatically. The selected system is marked with a "B".

**Please note:** Auto login B can be used in separate systems which are overlapping each other. As soon as the handset has measured a low radio signal 5 times in succession, it will start up the Auto login B procedure and change to an alternative system if available. Changing between two systems can only take place while on hook. Any call will be dropped when changing to an alternative system.

### 9.5.4 Remove subscription

Subscriptions can be removed from the system in use and from the 9 other systems (if connected). Removing a subscription requires a password. Password is factory set at 0000. If the system in use is removed, it is necessary either to select one of the remaining systems or to subscribe to a new one. If one of the systems not chosen is removed, the handset remains connected to the system in use.


### 9.5.5 Change startup text

The startup text is predefined as e.g. "KIRK telecom" as factory default. This can be changed by using the following procedure: Press **\*\*\***, BOOK, (✓) and give in the new startup text by the keyboard followed by (✓). It is possible to insert 24 characters.

## 9.6 Battery capacity

In the battery menu it is possible to see the remaining battery capacity. For reading the correct capacity, the handset has to be removed from the charger for at least one hour. Press "Menu" and use the < or > keys to reach the Battery Menu. Press "✓" to enter the menu, and you can see the current status of the battery capacity. Press "✓" to return to the menu system or press "Menu" to quit.

The indication on the display is not necessarily an exact reflection on the remaining speech time, but only an indication of the voltage on the battery.

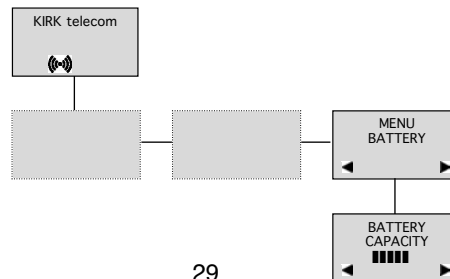


The handset has maximum 10 redial numbers and 10 Caller ID's placed in the same stack. Each number is only represented once. Enter the redial menu by pressing "<" (Redial) from the standby text. Repeated presses at the "<" button turn backward through the dialled numbers and CLIP numbers (from newest to the oldest). Right arrow moves in the opposite direction. It is also possible to reach the redial menu in the main menu. Numbers are named "REDIAL", "CLIP" or with the name.

If you want to delete a "CLIP" or a "REDIAL" you scroll to the name/number and press »✓« twice.


It is possible to edit the CLIP or redial numbers. Find the number you wish to edit and press the digits you want to add to the number, e.g. prefix = 0.


### The Redial and CLIP stack Menu (fig)

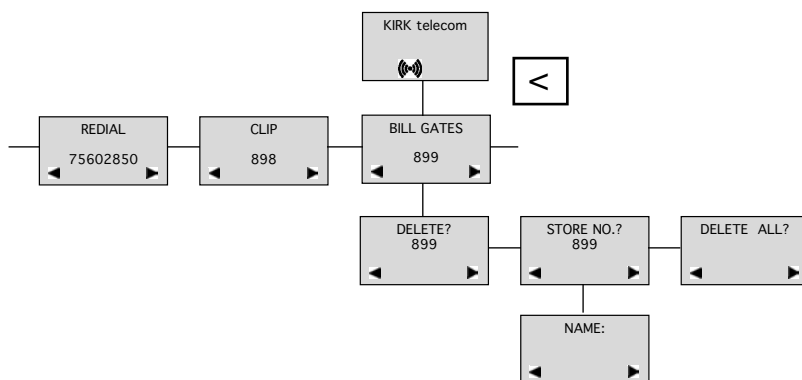


## 9.8 Book

Storing a number (max. 24 digits) in the telephone book is done by pressing the number to be stored (in on hook), then press the “>”- key followed by the “✓” key. The book can store up to 200 numbers with name. Typing of the name and a confirmation is required. After storing the telephone will go back to standby mode. If the display shows “MEMORY FULL”, it is necessary to delete one or more numbers from the telephone book.  
(See menu structure page 31)

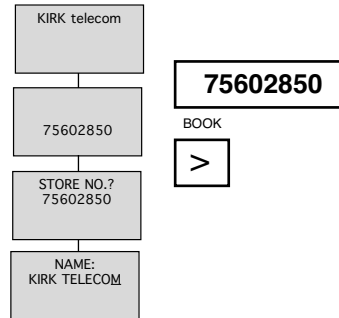

Read BOOK numbers: The telephone book is entered by pressing “>”(book). For quick-search: press the first letter of the name (using 1-9)(see chap. 9.2). Call the displayed person by pressing the  key. It is also possible to reach the telephone book menu in the main menu. Viewing and editing the telephone book can also be done while in conversation.

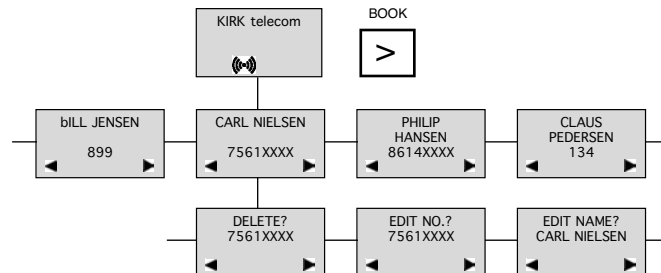

## **9.9 External services**


External services are facilities placed in the main system, and only available if the handset is subscribed to a KIRK system. Under External services can be found; Clip stack, Delete clip stack and local Phone book. The Local Phone book is a common Phone book for all handsets subscribed to the actual system, and all handsets subscribed to the system are listed in the Phone book. Additional numbers can be added to the Phone book by the system administrator.

## **9.10 MSF Functions**


MSF Functions are special functions, which are based on MSF (Message Service Function). The functions require special software in the main system.

### 9.11 Mail/Text Messages

*Available in systems configured with the possibility of sending text messages*

At the reception of a text message the envelope icon  appears in the display. The envelope icon is indicating one or more unread messages.

The text message is shown in the display, and when the message is read the envelope icon will disappear.

If the message contains a call-back number, this will be displayed on the bottom line of the display. As long as the call-back number is in the display, it is possible to activate the number by pressing the -key.

1st letter in the display, in front of the timestamp, shows the message status: read (R), unread (N) or locked (L). Mails include a maximum of 72 letters or digits (2 display screens of 36 each). Call-back no. is max. 24 digits (or letters for E-mail).

14 messages can be "stored" in the handset. When receiving a new message, the oldest unlocked will be deleted. Locked messages will not automatically be overwritten, but can manually be deleted. Maximum 7 messages can be locked.

#### **Read a mail**

Press the "R"- (MAIL) key followed by the ✓-key or enter the mail menu (in on hook condition)

If the message includes more than 36 letters or digits, the message will run over 2 display screens

Use the > -key to scroll. To see the **sender** of the mail, press the ✓-key. To leave the mail, press the MENU-key

#### **Reply a mail**

Open the mail by pressing the R-key followed by the ✓-key, press the ✓-key again and use the < >-keys to find the reply feature, press the ✓-key and you are then able to reply the mail. After writing your reply press the ✓-key to confirm

#### **Forward a mail**

Open the mail by pressing the R-key followed by the ✓-key, press the ✓-key again and use the < >-keys to find the forward feature, press the ✓-key twice and you are then able to write the number on the receiver. Confirm with the ✓-key

#### **Delete all mail**

Open the mail stack by pressing the R-key followed by the ✓-key, press the ✓-key again and use the < >-keys to find the delete feature, press the ✓-key and all mails are deleted

### Delete a mail

Open the mail by pressing the R-key followed by the ✓-key, press the ✓-key again and use the < >-keys to find the delete feature, press the ✓-key and the mail is deleted

### Lock/unlock a mail

Open the mail by pressing the R-key followed by the ✓-key, press the ✓-key again and use the < >-keys to find the lock/unlock feature, press the ✓-key and the mail is locked/unlocked

### Write a mail


To write a new mail press the R (mail)-key, confirm with the ✓-key and write your message. To send the mail press the ✓-key, type the number of the receiver and confirm with the ✓-key

If one or more mails are stored do as followed: Press the R (mail)-key followed by the >-key confirm with the ✓-key and write your message. Press the ✓-key, type the number of the receiver and confirm with the ✓-key. The message is sent.

### Note

*In case a sent message is not received, the sender will get a message in the display.*

### Menu structure

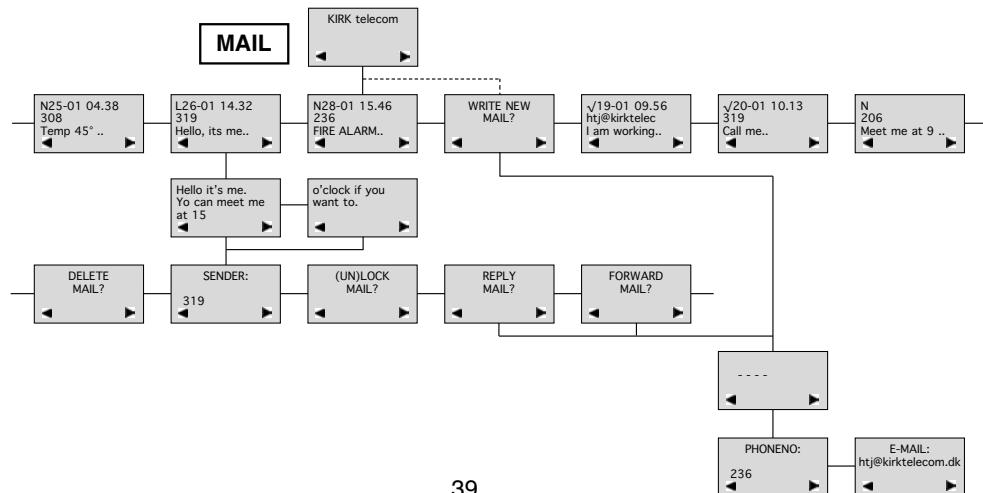

## 9.12 Menu language

There are 10 predefined languages in the handset: English, German, French, Italian, Spanish, Dutch, Portuguese, Swedish, Danish and Norwegian. Select the required language by pressing the ✓-key. If an 11th language is present this will be shown. This language is a specific dealer language and is factory programmed.

## 10. Shortcuts

"KEY LOCKED": Press: MENU ★. (Display shows )

"SILENT": Press: MENU #. (No sounds) (Display shows )

"PHONE BOOK": Press >(BOOK) key in standby

Name search in telephone book: Press the first letter in name and > (book) afterwards

Store a number: Press >(BOOK) after the number (in on hook)

"REDIAL" and "CLIP": Press <(REDIAL) key in standby

"MAIL": Press R(MAIL) key in on hook

MUTE temporarily the ringer: Press "✓"(MUTE) when the telephone is ringing

MUTE the microphone: Press "✓"(MUTE) when the telephone is off hook

RECALL: Press the INT key if residential system, else press the "R"-key

Pause(-): Hold \* for one second

Change from pulse to DTMF(T): Hold ★ for 2 seconds

## 11. Speed dial

**Please note:** To use the speed dial function it is necessary to set “LONG KEY” to “SPEED DIAL”.

The speed dial list has maximum 11 speed dial numbers. Calling a number from the speed dial list is done by pressing the 0,1,2...9 key with a long key press or by pressing the alarm button key. If no number is assigned to the key it is possible to enter a new number. The number is added to the speed dial list automatically.

To store a number (max. 23 digits) in the speed dial list press MENU and use the < or > keys to reach the Speed dial Menu. Press ✓ to enter the menu. Use the < or > keys to scroll between the list numbers, enter the number and then confirm with ✓. After storing, the telephone will go back to standby mode.

To delete or change a number in the speed dial list press MENU and use the < or > keys to reach the Speed dial Menu. Press ✓ to enter the menu. Use the < or > keys to scroll between the list numbers, press ✓ to select the number in question and then use the < key to delete the existing number. Confirm with ✓ or enter a new number and then confirm with ✓.

## 12. Date and Time Function

The Date and Time function requires the use of a KIRK Wireless Server and special software in the main system. If the Date and Time function is supported, a clock is shown in the 1st line of the display. The clock shows the time with an accuracy of +/- 1 minute.

If the Date and Time function is supported, then date and time of the incoming or outgoing call is also shown in the CLIP/Redial stack on the 4th line of the display. An icon + date and time shows the status of the call.

If the call is missed, the date and time is displayed: ✕ 29/03 20:28

If the incoming call is received, the date and time is displayed: ➔ 29/03 20:28

If the outgoing call is made, the date and time is displayed: 29/03 20:28 ➔

Date and time is only displayed if CLIP feature is supported by the PBX.

### 13. Advanced settings

**AUTO HOOK:** Can be turned on/off using < and >. Confirm with ✓. When turned on, the handset automatically goes off hook when removed from the charger and a call is present. When placing the handset in the charger, the handset automatically goes on hook.

**ANY KEY ANSW:** Can be turned on/off using < and >. Confirm with ✓. When turned on, all keys work as a Hook key when receiving an incoming call.

**LONG KEY:** Can be set to “SEND MSF” or “SPEED DIAL” using < and >. Confirm with ✓. When choosing “SEND MSF” an MSF is sent to the KIRK Wireless Server when pressing 0,1,2...9 with a long key press or when pressing the alarm key with a long key press. When choosing “SPEED DIAL” a call is made to the assigned number when pressing 0,1,2...9 with a long key press or when pressing the alarm key with a long key press. If no number is assigned the alarm key it is possible to enter a new number. This number is automatically added to the speed dial list. For more information, see Chap 7.12.

**LONG KEY TIM:** Used to define the time for how long a key (0,1,2...9) should be pressed before it is detected as a long key press.

**A. KEY DELAY:** Used to define the time for how long the alarm key should be pressed before the alarm key function is executed.

**LS ON B-ANSWER:** Can be turned on/off using < and >. Confirm with ✓. When turned on and “B-ANSWER ON” (hands-free) is selected, the handset turns on the loudspeaker automatically (see Chap. 7.4).


**STANDBY TEXT:** Can be turned on/off using < and >. Confirm with ✓. When turned off the display shows a local standby text.

**HEADS. ALERT:** The ringer volume in headset can be set to either “OFF” or 1, 2, 3, 4, 5 (indicated by a bar) using < and >. Confirm with ✓.

**HEADSET VOL:** The volume in headset can be set to either 1, 2, 3, 4 or 5 (indicated by a bar) using < and >. Confirm with ✓.


**OFF HOOK MSF:** Can be set to either “NORMAL”, “KEY CLICK” or “KEY BEEP” using < and >. Confirm with ✓. The “OFF HOOK MSF” setting only applies to the behaviour of the handset when an MSF is received and the handset is off hook. When set to “NORMAL” the alert type used is the one defined in the MSF. When set to “KEY CLICK” a key click is produced when receiving an MSF. When set to “KEY BEEP” a key beep is produced when receiving an MSF.

Advanced settings (fig)

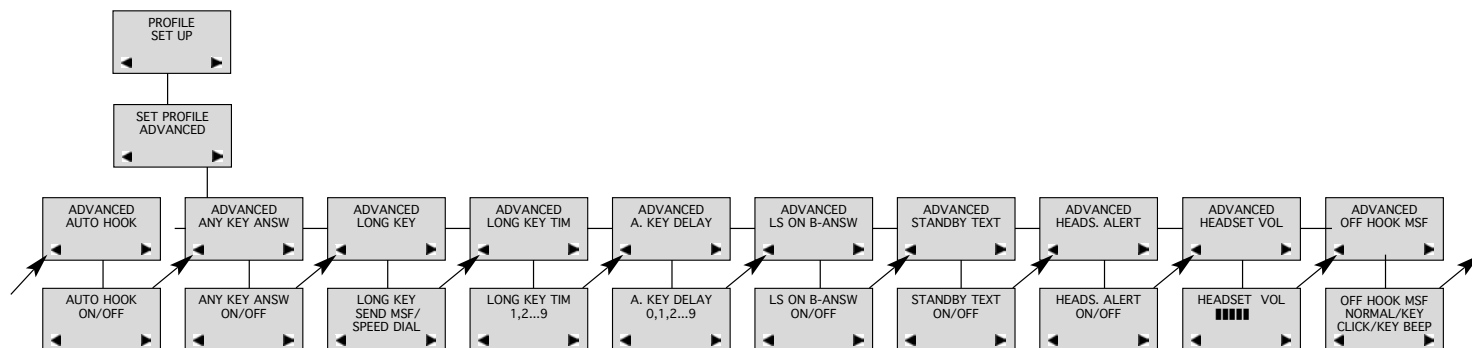

## 14. Information

### 14.1 Error tree

Problem	Check
The telephone freezes	Remove and replace the battery pack. Press  to turn on the telephone
The telephone does not ring	Check whether the ringer is SILENT or RINGER VOL. is OFF
The telephone cannot find a system ID at "SUBSCRIPTION CREATE"	Check whether the system is set to allow subscriptions
The telephone cannot subscribe even if system ID has been found	Check if Access Code is necessary
Not possible to turn on the telephone	Check if battery is connected. If yes, charge the battery
The telephone turn off when receiving a call and going off-hook	Charge the battery. If still a problem change the battery as it might be defective

### 14.2 Error information

Improper function of the handset might be related to the installation of the DECT system or failures related to the main system. Before declaring a handset for repair be sure that the main system is operating properly.

### 14.3 Warranty

The handset is covered by a normal warranty-solution, except the battery. The lifetime of the battery depends on the general use of the handset.

The handset is not covered by a general warranty if:

- The handset is exposed to water or metal dust
- The handset is mistreated
- The handset is exposed to unauthorised break-in

#### 14.4. Technical information

##### Approvals

Acoustics: TBR 10  
Electrical: TBR 6 (DECT RF)  
Access profile: TBR 22 (GAP)  
EMC: ETS 300 329 (CE labelling)

##### Size and weight

Size: 148 x 50 x 28 mm  
Weight: 130 g including battery  $\pm$  10 g

##### Capacity

Active talking time 16 hours  
Stand-by time 150 hours

##### Temperature and air pressure

Operating temperature: 0-40°C  
Air pressure: Normal atmosphere condition

##### Charger (orange)

The AC power adapter used in connection with the handset charger 8464 2458 must **not** be connected to a voltage higher than 250V AC.

## 15. EC Declaration of Conformity



Manufacturer

KIRK telecom A/S  
Langmarksvej 34  
8700 Horsens  
Denmark

**Product**  
**KIRK 4080**

**Type**  
**0238 02XX**

### **Type number**

XX may vary (numbers and letters) depending on software and design.

### **Telecom requirements**

The transceivers described above comply with the essential requirements of the R&TTE directive 99/5/EC if used for the intended purpose.

**Applied standards**

	<b>Standard</b>	<b>Date</b>
EN 60950	Health and Safety requirements	2000-1
EN 301 489-1	Electromagnetic Compatibility requirements	2001-09
EN 301 489-6	Electromagnetic Compatibility requirements	2000-09
TBR 22	Generic Access Profile (GAP)	1997
TBR 10	General Terminal Attachment requirements	1999
TBR 6	General Terminal Attachment requirements	1999

**Application, Intended purpose**

The KIRK 4080 is a DECT based handset, designed to be used in connection with KIRK wireless communication solutions in potentially explosive environments. The DECT transmitter frequencies of the apparatus are harmonized for these services in the European Community.

**Meaning of Conformity**

For the application of the equipment in areas which have a potentially explosive atmosphere, the manufacturer declares on his own responsibility that under the claimed type of protection the equipment is in conformance with the relevant European harmonized standards. The equipment may only be used under conditions that are mentioned in the ATEX and IEC Type Examination Certificate.

### Electrical apparatus for potentially explosive atmospheres

The KIRK 4080 is in conformance with the requirements of the ATEX Directive 94/9/EC as well as the below standards

		Date
EN 50014	(+ amendments) General requirements	1997
EN 50020	Intrinsic Safety “ i “.	2002
EN 50281-1-1	For use in the presence of combustible dust.	1998
EN 60529	(+ amendments) Ingress Protection Degree, IP-code.	2000
IEC 60079-0	General requirements	2000
IEC 60079-11	Intrinsic Safety “ i “.	1999

### Notified Body

Identification number: **0539**

### Examination Certificate

EN: DEMKO 04 ATEX 136204 X

IEC: IECEX ULD 04.0001 X

### Validity

This declaration is only valid if accompanied with an EC Type Examination Certificate obtained from a Notified Body or from a competent authority in an EU member state.

### Quality Assurance

The product is designed and produced by a manufacturing organisation, which is certified on ISO 9001: 2000 and ISO 14001: 1996 standards. These products are in conformance with the full quality assurance procedures as mentioned in annex III, IV and VII of the ATEX directive 94/9/EC and annex V of the R&TTE directive 99/5/EC and bears the marking 0539.

The number 0539 is the identification number of UL International, Demko A/S.

Compliance with the requirements of ISO 9001: 2000 and ATEX directive are assessed and certified by the Notified Body:


UL International  
Demko A/S  
Lyskaer 8  
P. O. Box 514  
DK-2730 Herlev

Technical Director : Erik Stridbæk

Signed : 

Date : 10-09-2004

Quality Manager : Søren E. Mikkelsen

Signed : 

Date : 10-09-2004


**For safe use of the KIRK 4080, please remind the following:**

The KIRK 4080 is developed for use in potentially explosive working environments, as defined by local fire protection authorities. The handset complies with the ATEX directive 94/9/EC as well as IEC standards.

For safe use of KIRK 4080, please remind the following:

- Please consult your system manager for instruction before using KIRK 4080
- Do not open KIRK 4080 in a potentially explosive atmosphere
- Use only the dedicated charger **8464 2458** (orange) for charging KIRK 4080
- Do not charge KIRK 4080 in a potentially explosive atmosphere
- The AC power adaptor used in connection with the charger must **not** be connected to a higher voltage than 250V AC.
- Use only battery pack **8474 3416** for battery replacement.
- Use only headset part no. **0231 9517** with KIRK 4080

- The leather pouch **0231 9543 must** be used with KIRK 4080:
  1. In dry areas with humidity conditions of less than 60%
  2. When the user is wearing clothes that could cause electrostatic charging of the handset
- If defects occur, remove KIRK 4080 immediately from the potentially explosive atmosphere
- Only KIRK telecom A/S may repair and service KIRK 4080
- Relevant data concerning repairs must be logged
- For traceability it is advisable to keep a record of type- and serial numbers of the handsets, as well as the name of users of the handset

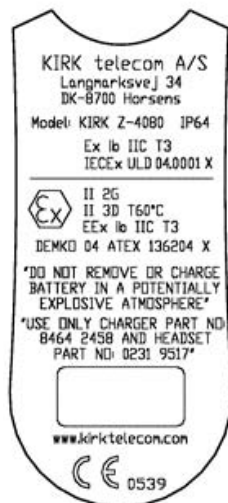

### Name and address of manufacturer

KIRK 4080	Product name
IP64	IP 64 classification
Ex	KIRK 4080 is approved according to International standards
ib	Intrinsic safe, ib category
IIC	Equipment group II, ib group C (gas group C)
T3	Temperature group T3 (relevant for gas)
IECEX	International country code for notified body/year/certification number
X	Special warnings concerning the use of KIRK 4080 exist, please refer to the users guide

---

II 2G	Equipment group II, zone 1 (gas)
II 3D	Equipment group II, zone 2 (dust)
T60°C	Max. surface temperature of KIRK 4080 in use
Ex logo	Specific marking of explosion protection
EEx	KIRK 4080 is approved according to European standards
ib	Intrinsic safe, ib category
IIC	Equipment group II, ib group C (gas group C)
T3	Temperature group T3 (relevant for gas)
Demko	Name of notified body/year/certification number
X	Special warnings concerning the use of KIRK 4080 exist, please refer to the users guide
CE 0539	CE marking and Demko identification number

If in doubt about installation, configuration or the correct functioning of the product please consult the manufacturer:

**KIRK telecom A/S**

Customer Support

Langmarksvej 34

8700 Horsens

Denmark

Tel: +45 75602850

support@kirktelecom.com